


# LIAN LI O11D XL EVO **DISTRIBUTION PLATES**

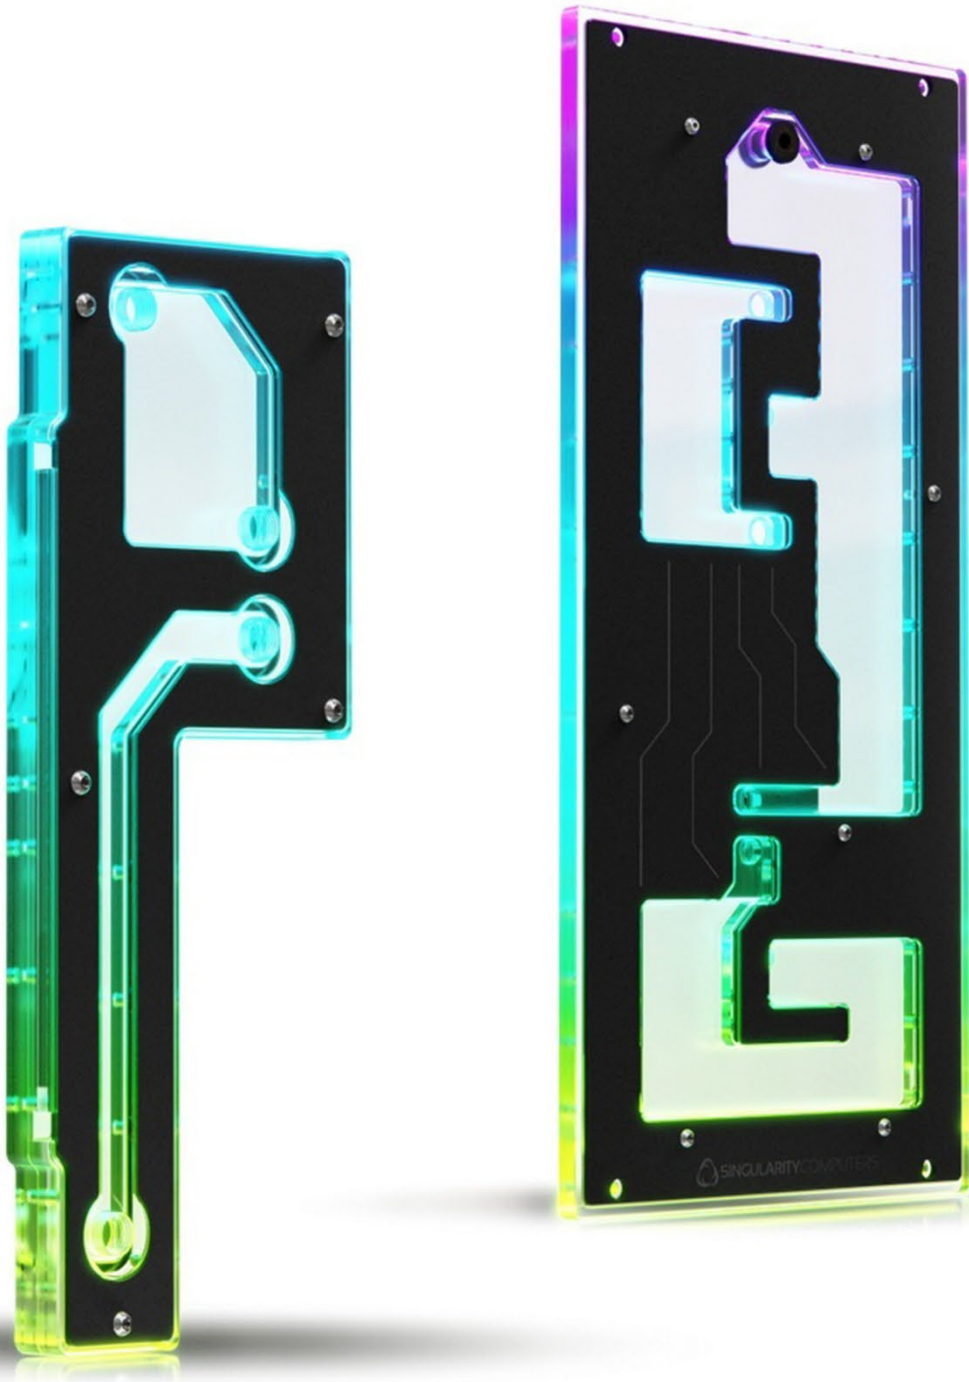

# MANUAL

Revision 1.2

## Table of Contents

Introduction.....	2
Specifications & Included Items .....	2
Installation.....	2
Dimensions, Port Layout & Flow Diagram.....	3

## Introduction

### Lian Li O11D XL EVO Front Distribution Plate

Front Panel Distribution Plate for the Lian Li O11D XL EVO. It attaches to the front panel and replaces the original glass. It mounts to existing holes on the case so there is no need for modifications. It has an integrated reservoir and D5 pump top. This distribution plate can be used on its own, it does not require other distribution plates. It is built from CNC machined clear cast acrylic and uses gaskets instead of O-Rings for increased durability. Hand assembled with stainless steel fasteners. There is an integrated ARGB LED strip with an Accent Cover. Choose from various color options for the Accent Cover and Back Plate to suit your preferences.

### Lian Li O11D XL EVO Rear Distribution Plate

Rear Distribution Plate for the Lian Li O11D XL EVO. It attaches to existing holes on the case, eliminating the need for modifications. It can be used with our Lian Li O11D EVO Front D5 Distribution Plate or on its own. Designed to fit onto the rear panel surrounding the IO area. The distribution plate is built from CNC machined clear cast acrylic and uses gaskets instead of O-Rings for increased durability. Hand assembled with stainless steel fasteners. It features an integrated ARGB LED strip with an Accent Cover. Choose from various color options for the Accent Cover and Back Plate to suit your preferences.

## Specifications & Included Items

	Lian Li O11D XL EVO	
	Front Distribution Plate	Rear Distribution Plate
Distribution Plate	x1	x1
Integrated LED Strip	ARGB 5V with 50cm cable.	
Fasteners	Stainless Steel. M4 x 12mm x 4	
Gaskets	Silicone Black.	
Materials	Cast Acrylic.	
Manufacturing Process	CNC Router.	
Assembly	Assembled by hand and pressure tested.	

## Installation


All distribution plates mount to existing mounting holes on the case. Put the distribution plate in position and move it until the mounting holes align with the mounting holes on the case. The included covers can be used between the distribution plates and the case to improve aesthetics. Use the included M4 x12mm fasteners to mount the distribution plates, there are 4 fasteners per distribution plate.

Please make sure to use the included O-Rings when installing the pumps. Remove the pump covers from the distribution plate, install the O-Rings into the O-Ring grooves on the pump tops. Then push the pump into the pump top and screw the cover on. Tighten the pump covers down firmly. Pressure testing is recommended but do not pressure test past 0.5 bar.

## Dimensions, Port Layout & Flow Diagram

① Dimensions are in millimetres

**Lian Li O11D XL EVO  
Front Distribution Plate**

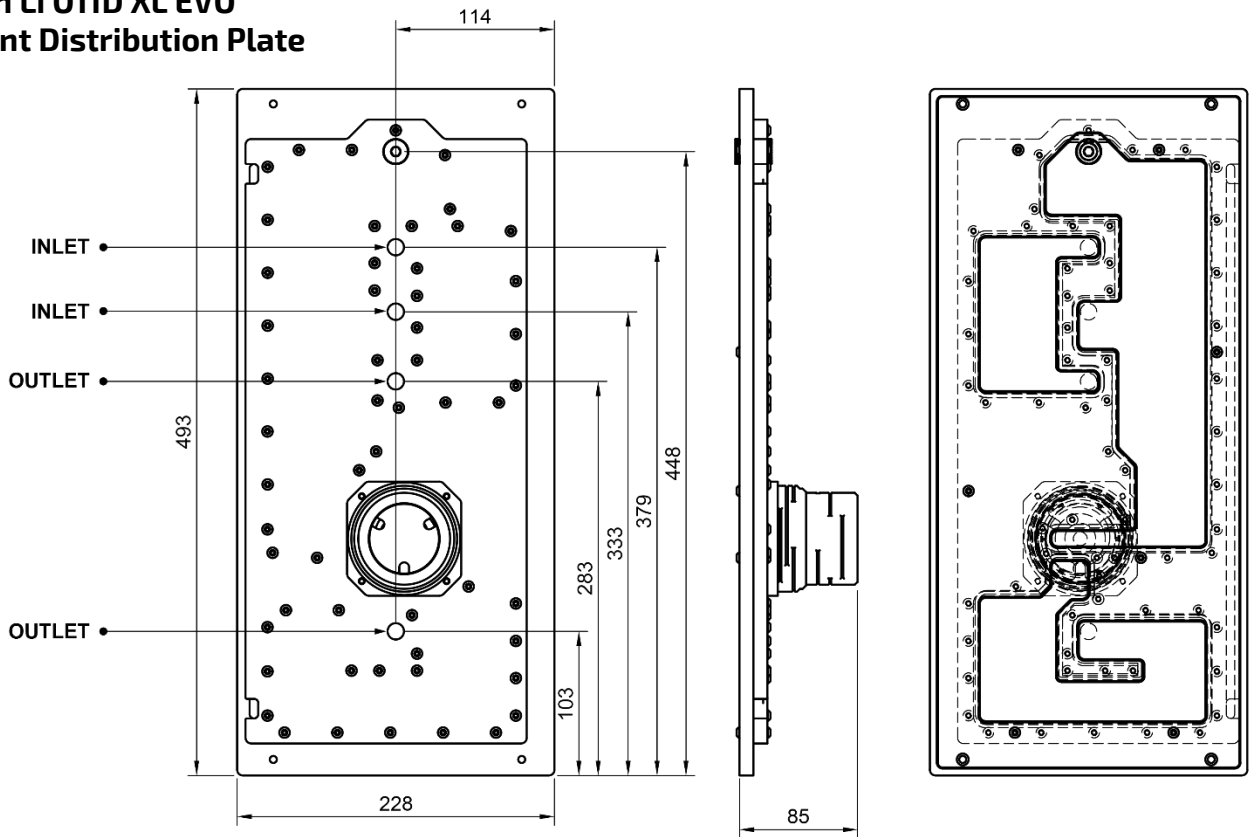

**Lian Li O11D XL EVO  
Rear Distribution Plate**

