


PHANTEKS

ENTHOO ELITE

DUAL LOOP D5 DISTRIBUTION PLATE SET

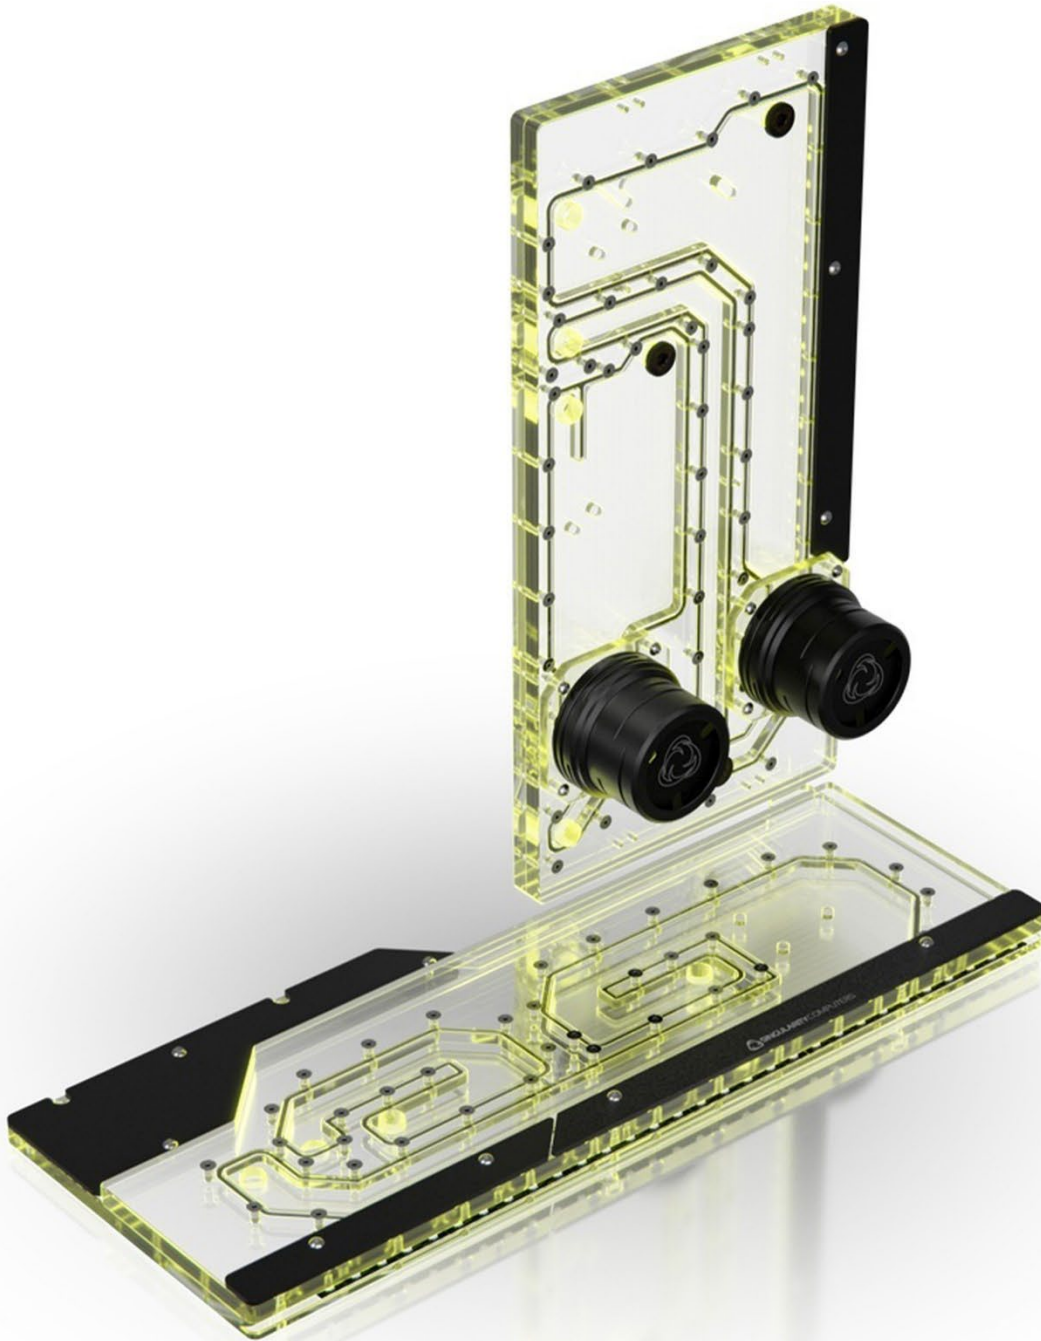

MANUAL

Revision 1.3

Table of Contents

Introduction 2

Specifications & Included Items 2

Installation..... 2

Dimensions, Flow Diagram & Port Layout.....3

Introduction

Mid and Vertical Distribution Plate Set for the Phanteks Enthoo Elite. This is a dual loop distribution plate set. The Vertical Distribution Plate mounts to the right of the motherboard and has two integrated reservoirs and D5 pump tops. The Mid Distribution Plate mounts below the motherboard on the mid plate and is for the GPU loop and lower radiators. The distribution plates are built from CNC machined clear cast acrylic and uses gaskets instead of O-Rings for increased durability. They are hand assembled with stainless steel fasteners. There is two integrated ARGB LED strips with Accent Covers. There are also Back Plates included to cover the rear side of the Distribution Plates, so that you can't see the case panels behind them. Select from the different color options below for the Accent Covers and Back Plates.

Specifications & Included Items

Phanteks Enthoo Elite Dual Loop D5 Reservoir Distribution Plate Set	
Distribution Plate Set	Mid x1 Vertical x1 (available separately as well)
Integrated Reservoirs	x2
Integrated Pump Tops	x2
Pump Covers	D5 x2 (Available in Black/Silver)
Ports	Mid x4 Vertical x4 Fill x1 Drain x1
Integrated LED Strip	ARGB 5V with 50cm cable x2
Fasteners	Stainless Steel. M4 x 25mm x8. M4 Washers x8. M4 Nut x8.
Gaskets	Silicone Black.
Materials	Cast Acrylic.
Manufacturing Process	CNC Router.
Assembly	Assembled by hand and pressure tested.

Installation

• Phanteks Enthoo Elite Vertical Dual D5 Reservoir Distribution Plate

Remove the entire drive mounting plate from the case which is to the right of the motherboard. Also remove the rails to create a flat area for the Distribution Plate to be mounted. Then mount the Distribution Plate to the slotted holes which are under the rails using the included fasteners. Make sure to use the included D5 O-Rings when installing the D5 Pumps.

• Phanteks Enthoo Elite Mid Distribution Plate

Remove all of the covers on the mid plate of the case, then install the Phanteks Elite Mid Distribution Plate using the included fasteners. The hole alignment can be found once the Distribution Plate is fitted onto the mid plate of the case.

Please make sure to use the included O-Rings when installing the pumps. Remove the pump covers from the distribution plate, install the O-Rings into the O-Ring grooves on the pump tops. Then push the pump into the pump top and screw the cover on. Tighten the pump covers down firmly. Pressure testing is recommended but do not pressure test past 0.5 bar.

Dimensions, Flow Diagram & Port Layout

① Dimensions are in millimetres

Phanteks Enthoo Elite Dual Loop D5 Distribution Plate Set

