# SPECTRE 4



## Manual Revision 1.0



### **Table of Contents**

| Introduction                    | 2 |
|---------------------------------|---|
| Specifications & Included Items | 2 |
| Installation                    | 3 |

Revision 1.0 Page | 1



#### Introduction

The Spectre 4 Elite has an all-new design with greatly increased ventilation, and it is larger to fit onto the 420mm radiator panels of Spectre 4. It has two thicker acrylic panels and countersunk fasteners to improved durability, quality, and aesthetics. It replaces the front radiator panel which enhances the transparent 'Spectral' look of the case, further showing off the coolant and internal components. The main purpose is an aesthetic feature, although it does increase fluid volume. It has a single inlet and outlet which can be routed in either direction. The ports are positioned on one end of the distribution plate for connection to and from the main case distribution plate and front radiator. Radiators can still be attached and there is ventilation around the perimeter of the distribution plate and through the ventilated sections on the front. There is an LED strip positioned on the edge of the distribution plate so that it glows.

#### Specifications & Included Items


| Distribution Plate    | x1  |
|-----------------------|---|
| Ports                 | x2 G1/4" BSPP. 1x Inlet. 1x Outlet.                             |
| LED Strips            | 50cm ARGB 5V with 50cm black cable (pre-installed).             |
| Fasteners             | Stainless Steel Silver.   |
| Gaskets               | Silicone Black.   |
| Materials             | Cast Acrylic.   |
| Manufacturing Process | CNC Router.   |
| Assembly              | Assembled by hand and pressure tested.                          |
| Testing & Validation  | All Distribution Plates are factory pressure tested and precise |
|                       | fastener tension is applied.                                    |


Revision 1.0 Page | 2


#### Installation

#### Step 1


Remove the Front Corner Panel from the case. Then remove the Radiator Panel and Radiator Spacer, these will be replaced by the Spectre 4 Elite Distribution Plate.

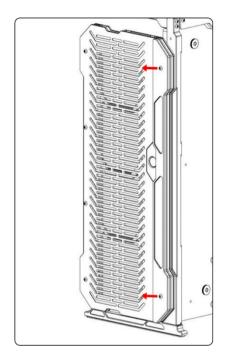


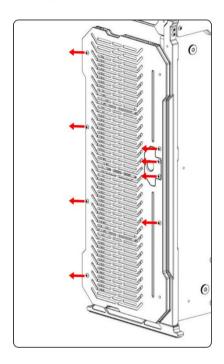

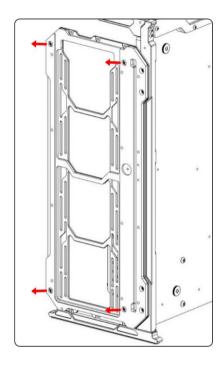

The Power Button will also need to be removed and attached to the Spectre 4 Elite Distribution Plate Instead.

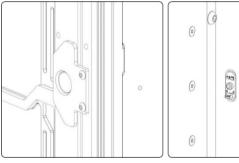

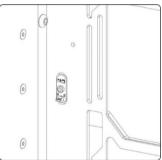


#### Step 2

Install the Spectre 4 Elite Distribution Plate using 5x 30mm M4 fasteners.

The radiator will need to be installed prior to installing the Distribution Plate.

Reinstall the Front Corner Panel using the 2x 16mm M4 fasteners.

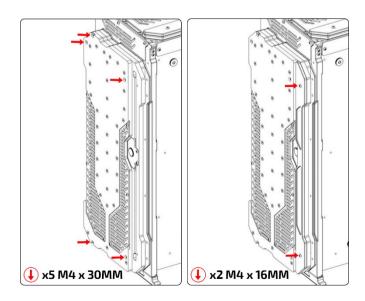

Revision 1.0 **Page** | 3