

LIAN LI O11 EVO XL DISTRIBUTION PLATES



MANUAL

Revision 1.1

Table of Contents

Introduction..... 2

Specifications & Included Items 2

Installation..... 2

Dimensions & Flow Diagram.....3

Introduction

Front Panel Distribution Plate for the Lian Li-011D XL EVO. It attaches to the front panel and replaces the original glass. It mounts to existing holes to the case so there is no need for modifications. It has an integrated reservoir/s and D5 Pump Top/s. It is built from CNC machined clear cast acrylic and uses gaskets instead of O-rings for increased durability. Hand assembled with stainless steel fasteners. There is an integrated ARGB LED strip with an Accent Cover.

- **Lian Li 011D XL EVO Front Dual Loop D5 Reservoir Distribution Plate**
Dual Loop Distribution Plate with two separate reservoirs and D5 pump tops.
- **Lian Li 011D XL EVO Front Dual D5 Reservoir Distribution Plate**
Single Loop with a single reservoir but two D5 pump tops for higher performance.
- **Lian Li 011D XL EVO Front D5 Reservoir Distribution Plate**
Single Loop with a reservoir and D5 pump top.

Specifications & Included Items

| | |
|--------------------------------|---|
| Pump Cover(s) | CNC Machined Anodized 6061 Aluminum. |
| Integrated LED Strip | ARGB 5V with 50cm cable. |
| Fasteners | Stainless Steel. M4 x 12mm x4. |
| Gaskets | Silicone Black. |
| Materials | Cast Acrylic. |
| Manufacturing Process | CNC Router, CNC Lathe, Laser, PCB. |
| Assembly | Assembled by hand and pressure tested. |
| Dimensions & Weight | <p>Lian Li 011D XL EVO Front Dual Loop D5 Reservoir Distribution Plate L: 400mm x W: 300mm x H: 40mm. 3kg. Packaged: L: 450mm x W: 350mm x H: 100mm. 4kg.</p> <p>Lian Li 011D XL EVO Front Dual D5 Reservoir Distribution Plate: L: 400mm x W: 300mm x H: 40mm. 3kg. Packaged: L: 450mm x W: 350mm x H: 100mm. 4kg.</p> <p>Lian Li 011D XL EVO Front D5 Reservoir Distribution Plate L: 350mm x W: 430mm x H: 40mm. 2.5kg. Packaged: L: 400mm x W: 300mm x H: 40mm. 2.5kg.</p> |

Installation


First remove the stock front glass panel from the case. Then the distribution plate can be installed in its place using the included M4 16mm Countersunk Fasteners, M4 Nuts and M4 Washers x4.

Please make sure to use the included O-Rings when installing the pumps. Remove the pump covers from the distribution plate, install the O-Rings into the O-Ring grooves on the pump tops. Then push the pump into the pump top and screw the cover on. Tighten the pump covers down firmly. Pressure testing is recommended but do not pressure test past 0.5 bar.


Dimensions & Flow Diagram

① Dimensions are in millimetres



Lian Li O11D XL EVO Front Dual Loop D5 Reservoir Distribution Plate

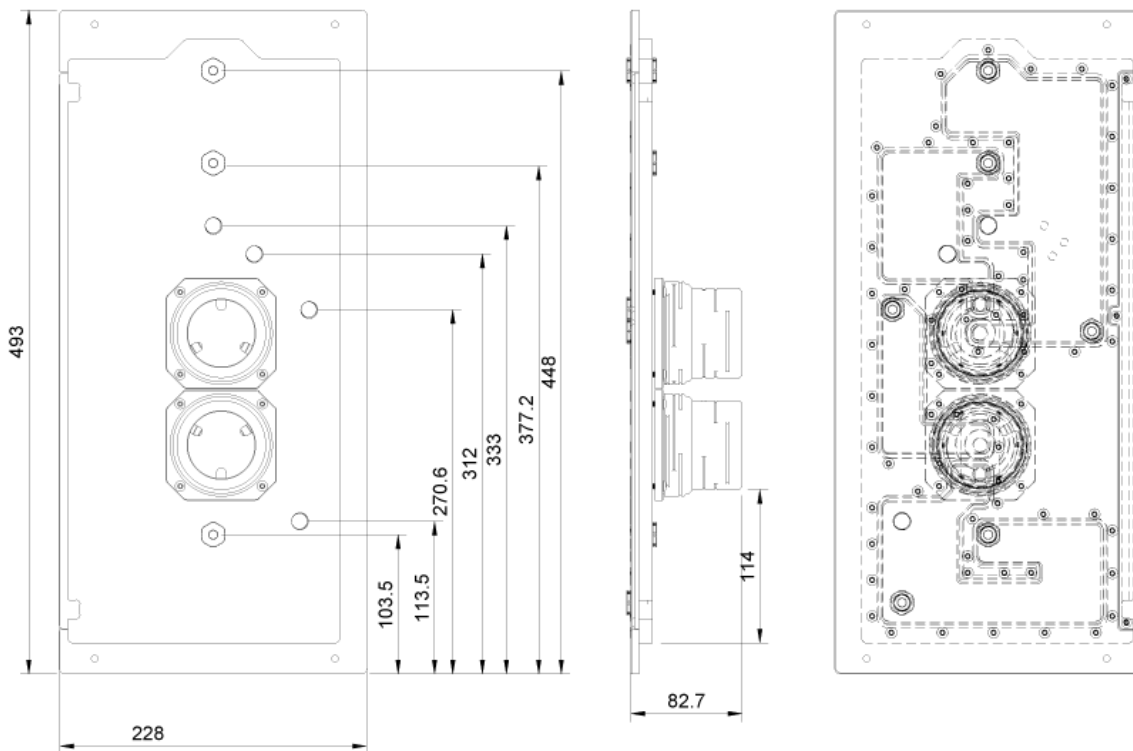


Lian Li O11D XL EVO Front Dual D5 Reservoir Distribution Plate

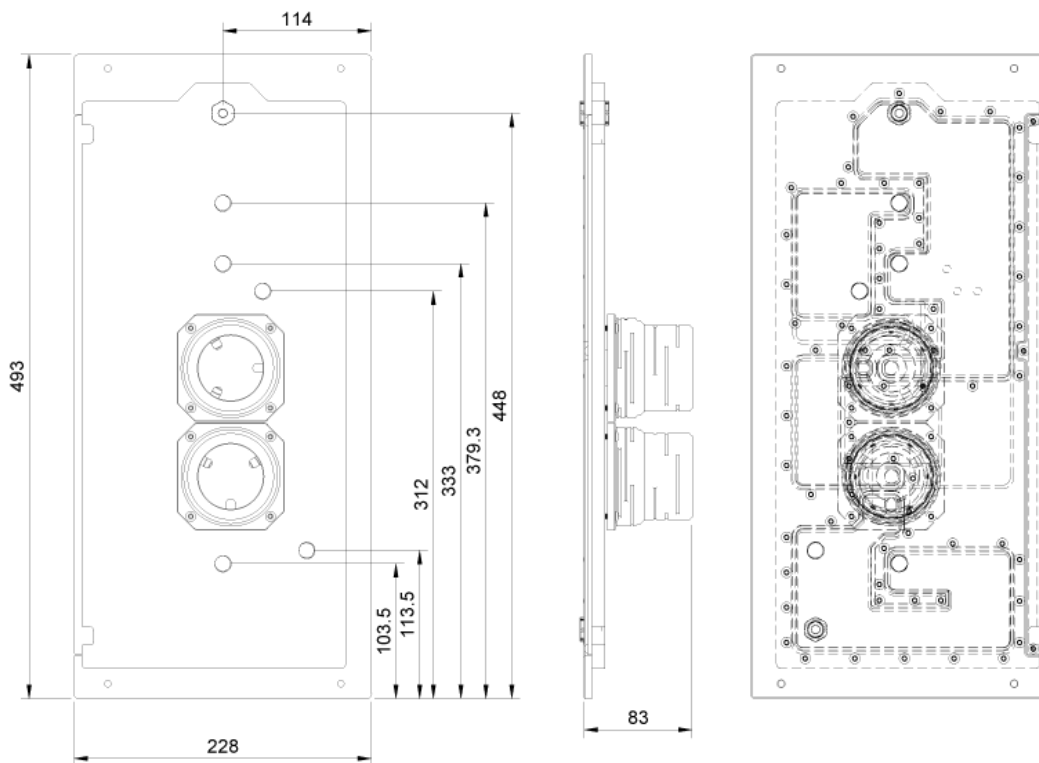

Lian Li O11D XL EVO Front D5 Reservoir Distribution Plate

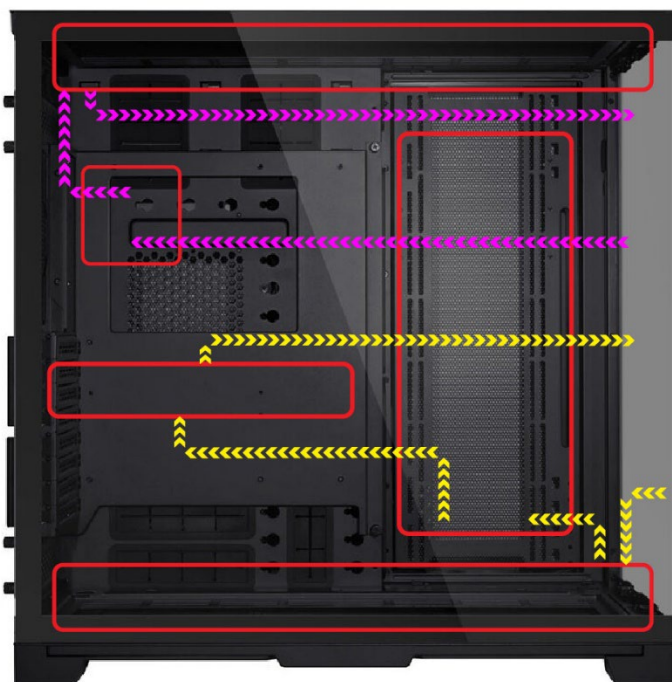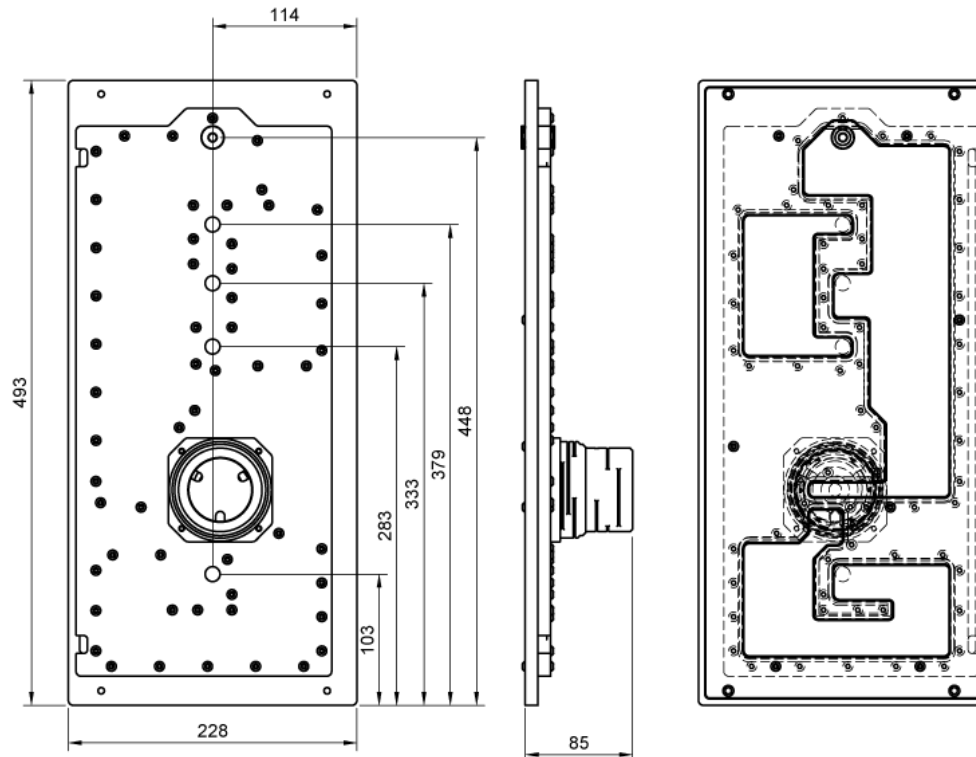

Lian Li O11D XL EVO Front Dual Loop D5 Reservoir Distribution Plate

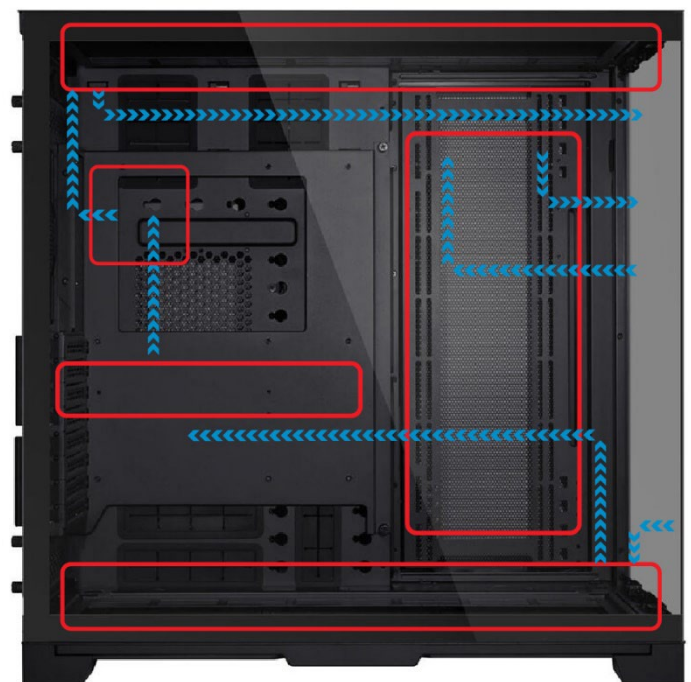

Lian Li O11D XL EVO Front D5 Reservoir Distribution Plate & Lian Li O11D XL EVO Front Dual D5 Reservoir Distribution Plate