

LIAN LI O11 VISION COMPACT **DISTRIBUTION PLATE SET**



MANUAL

Revision 1.3

Table of Contents

Introduction	2
Specifications & Included Items	2
Installation	3
Front Distribution Plate installation.....	3
With Top Glass Panel.....	3
With Top Radiator Mount	3
Rear Distribution Plate installation	4
Dimensions & Flow Diagram	5
Lian Li O11 Vision Compact Distribution Plate Set Flow Diagram.....	5
Lian Li O11 Vision Compact Front D5 Reservoir Distribution Plate Flow Diagram.....	6

Introduction

The Lian Li O11 Vision Compact Distribution Plate Set includes two distribution plates. The front panel Distribution Plate has an integrated Reservoir, D5 Pump Top and Pump Cover and replaces the stock tempered glass front panel window of the case. The rear distribution plate mounts on the rear fan mounting position above the expansion slots. The distribution plates are built from CNC machined clear cast acrylic and uses gaskets instead of O-Rings for increased durability. They are hand assembled with stainless steel fasteners. Each has an integrated ARGB LED strips with an Accent Cover. There are also a Back Plate included to cover the rear side of the Rear Distribution Plate, so that you can't see the case panel behind it.

Specifications & Included Items

Distribution Plate Set	x1
Integrated LED Strip	x3 ARGB 5V with 50cm cable.
Fasteners	Stainless Steel.
Gaskets	Silicone Black.
Materials	Cast Acrylic.
Manufacturing Process	CNC Router.
Assembly	Assembled by hand and pressure tested.
Dimensions & Weight	<p>Lian Li O11 Vision Compact Distribution Plate Set: L: 400mm x W: 300mm x H: 100mm. 6kg.</p> <p>Lian Li O11 Vision Compact Front D5 Reservoir Distribution Plate: L: 400mm x W: 300mm x H: 40mm. 3kg.</p> <p>Lian Li O11 Vision Compact Rear Distribution Plate: L: 170mm x W: 120mm x H: 16mm. 1kg.</p>
Packaged Dimensions & Weight	<p>Lian Li O11 Vision Compact Distribution Plate Set: L: 450mm x W: 350mm x H: 100mm. 6kg.</p> <p>Lian Li O11 Vision Compact Front D5 Reservoir Distribution Plate: L: 450mm x W: 350mm x H: 100mm. 3kg.</p> <p>Lian Li O11 Vision Compact Rear Distribution Plate: L: 200mm x W: 100mm x H: 50mm. 1kg.</p>

Installation

Front Distribution Plate installation




First remove the stock front glass panel from the case. Then the distribution plate can be installed in its place. At the bottom use the two included M4 12mm Fasteners, M4 Nuts and Washers.

With Top Glass Panel


The stock plastic corner mount can be used. Mount the distribution plate to it using the included M3 25mm Fasteners and M3 Nuts x2.

With Top Radiator Mount

Remove the stock plastic corner piece and install the one included with the distribution plate instead. This can be installed using the included M3 22mm fasteners x2.

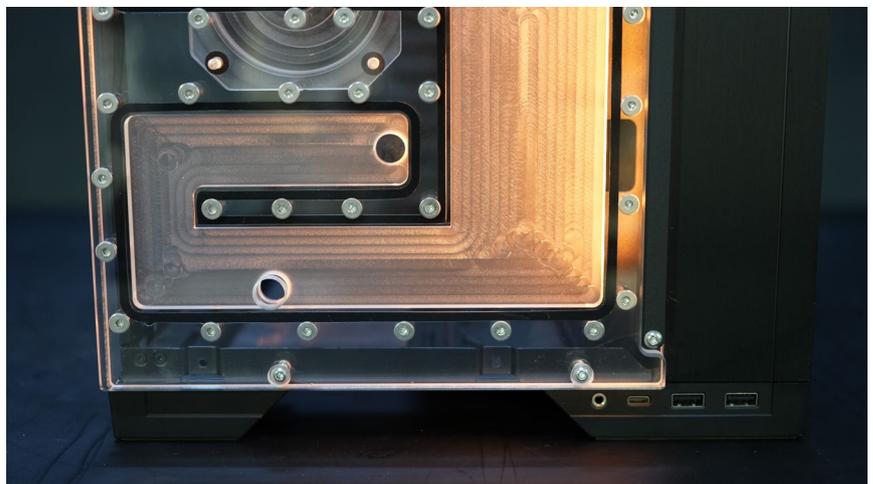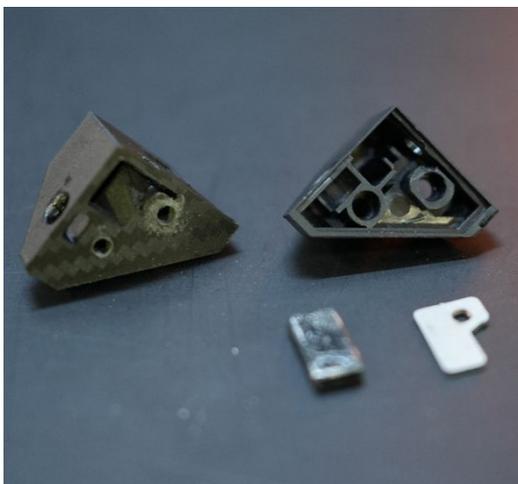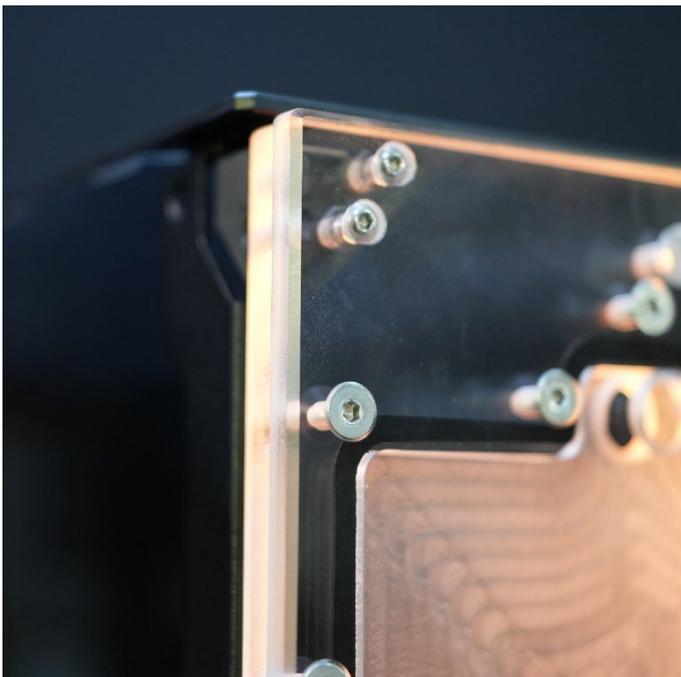

The panel marked in the diagram can be removed when the top panel glass is being used.

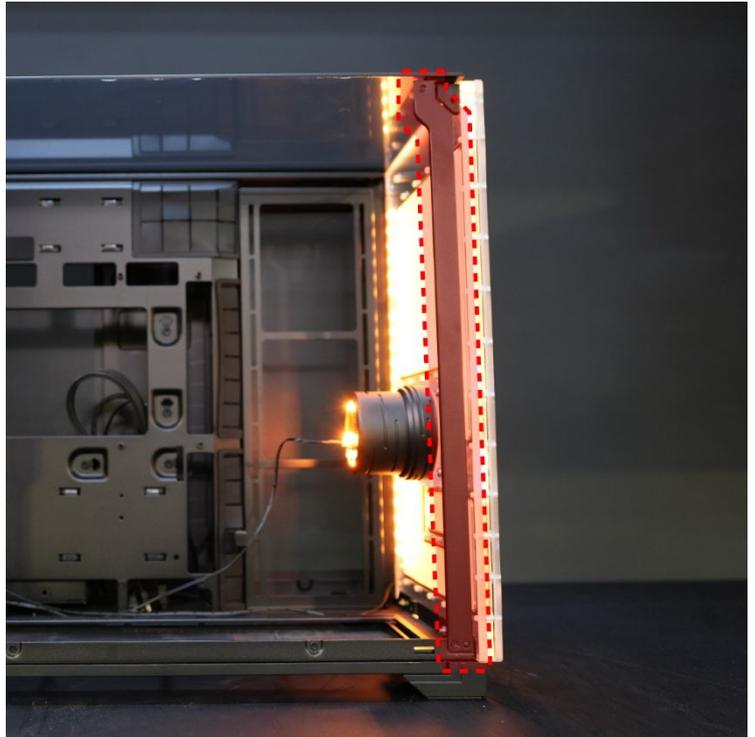


Rear Distribution Plate installation

Install the rear distribution plate onto the rear fan mount using the M4 12mm x4 fasteners.


Please make sure to use the included O-Rings when installing the pumps. Remove the pump covers from the distribution plate, install the O-Rings into the O-Ring grooves on the pump tops. Then push the pump into the pump top and screw the cover on. Tighten the pump covers down firmly. Pressure testing is recommended but do not pressure test past 0.5 bar.

Dimensions & Flow Diagram

① Dimensions are in millimetres

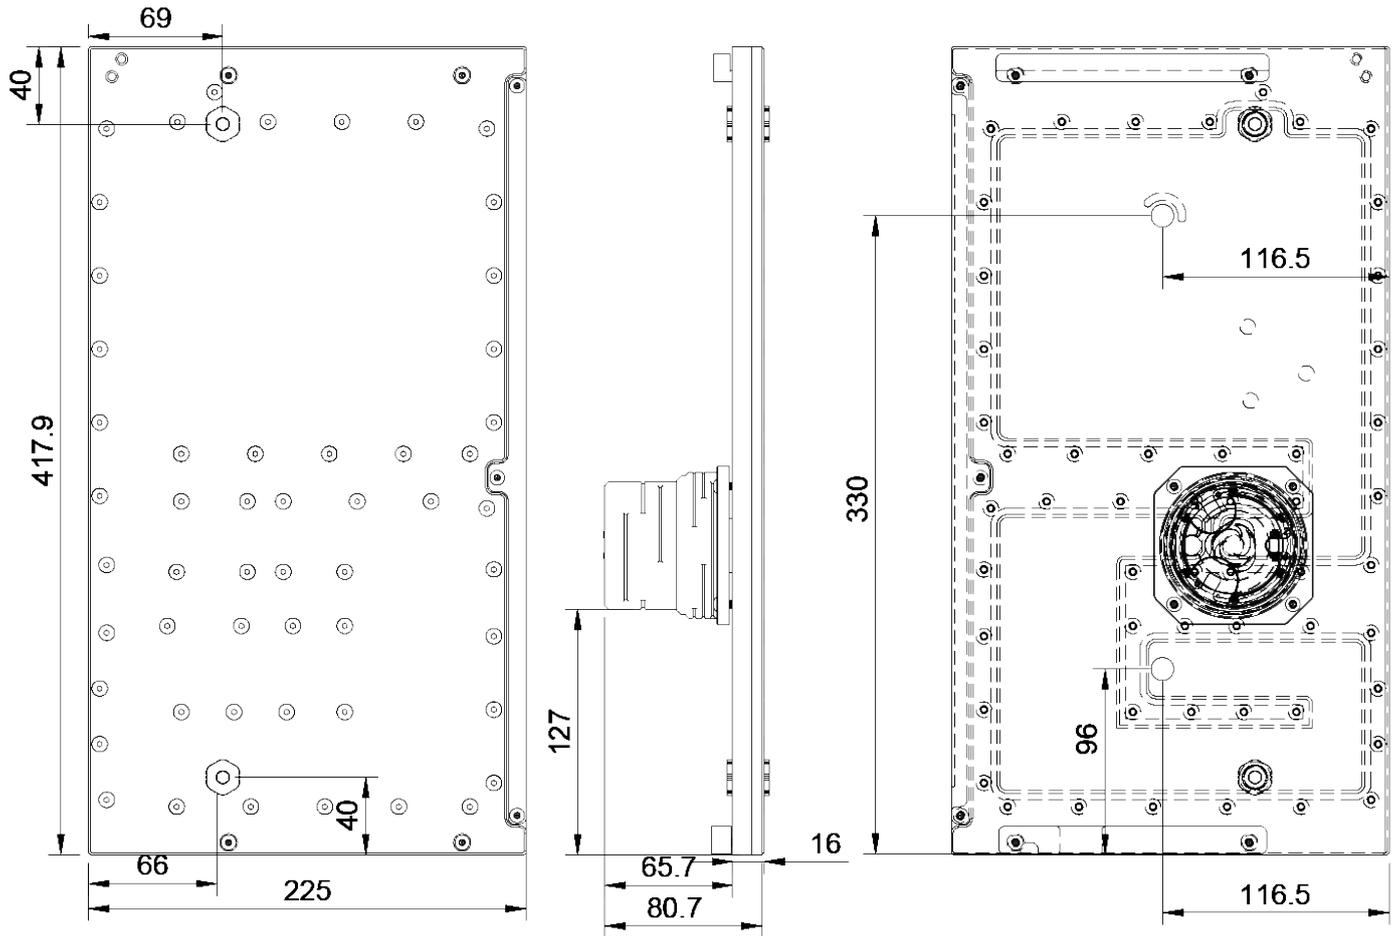


Lian Li O11 Vision Compact Distribution Plate Set Flow Diagram

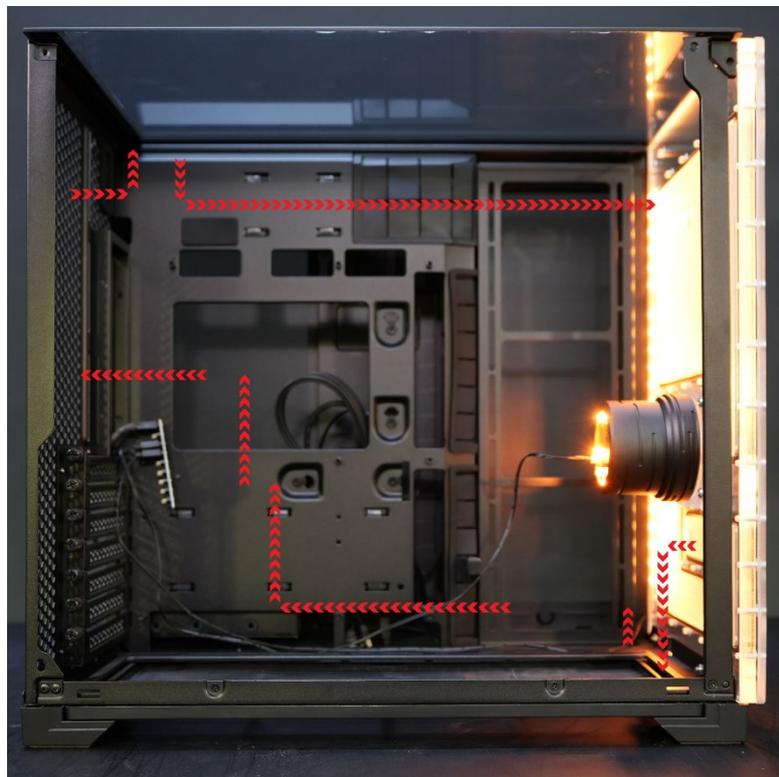

Lian Li 011 Vision Compact Front D5 Reservoir Distribution Plate Flow Diagram

With Top Radiator

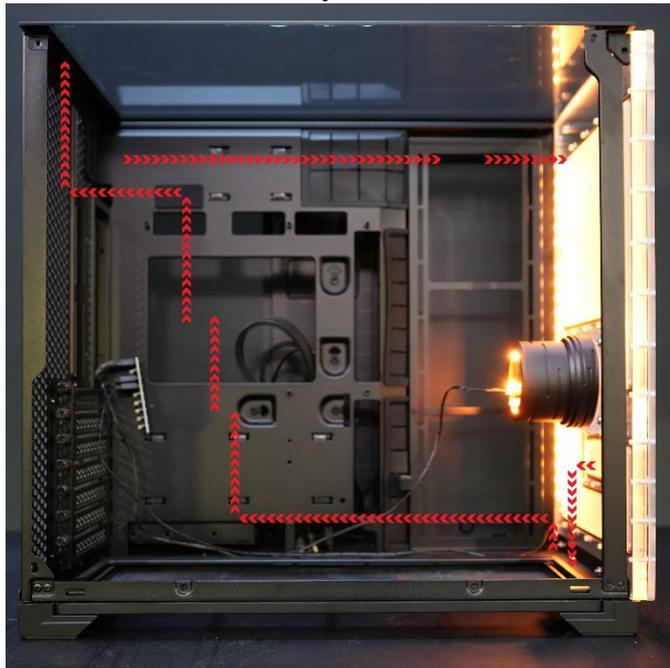

Without Top Radiator

