

LIAN LI O11D MINI V2

FRONT D5 RESERVOIR DISTRIBUTION PLATE



MANUAL

Revision 1.2

Table of Contents

Introduction.....	2
Specifications & Included Items	2
Installation.....	2
Dimensions & Port Layout.....	4

Introduction

Front Panel Distribution Plate for the Lian Li O11D Mini V2. It attaches to the front panel and replaces the original glass. It mounts to existing holes on the case so there is no need for modifications. It has an integrated reservoir and D5 pump top. This distribution plate can be used on its own, it does not require other distribution plates. It is built from CNC machined clear cast acrylic and uses gaskets instead of O-Rings for increased durability. Hand assembled with stainless steel fasteners. There is an integrated ARGB LED strip with an Accent Cover. There is also a Back Plate included to cover the inside border of the Distribution Plate, so that you can't see the case panels behind it.



Specifications & Included Items

Lian Li O11D Mini V2 Front D5 Reservoir Distribution Plate	
Distribution Plate	x1
Integrated LED Strip	ARGB 5V with 50cm cable.
Fasteners	Stainless Steel. M4 x 12mm CS x6.
Gaskets	Silicone Black.
Materials	Cast Acrylic.
Manufacturing Process	CNC Router.
Assembly	Assembled by hand and pressure tested.
Dimensions	L: 400mm x W: 300mm x H: 40mm.
Weight	3kg.
Packaged Dimensions	L: 450mm x W: 350mm x H: 100mm.
Packaged Weight	3kg.

Installation

First remove the stock front glass panel from the case. The fans next to the motherboard will need to be installed behind the mounting panel so that the distribution plate will fit.

Loosen the acrylic mounting block at the bottom of the distribution plate. Then install the distribution plate and the mounting block can be tightened again afterwards (torque should be 0.4NM). Install the included M3 16mm Fasteners x2 to hold the distribution plate at the top.

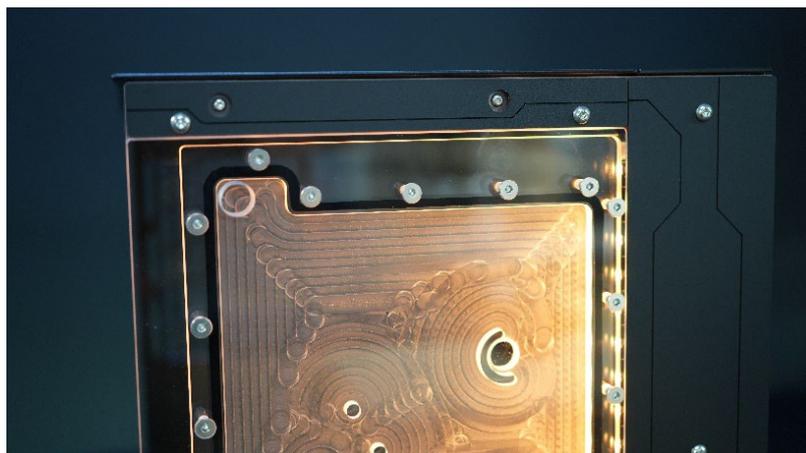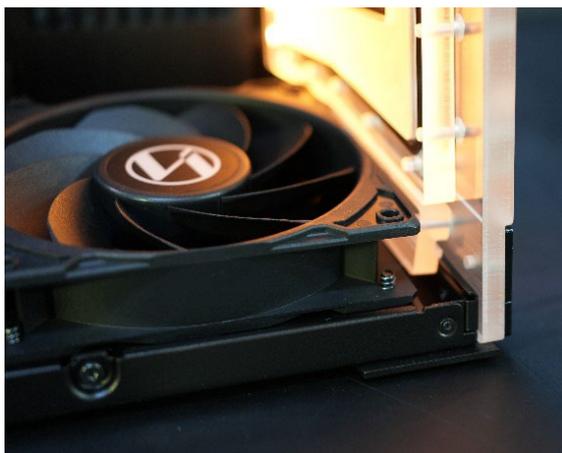

Please make sure to use the included O-Rings when installing the pumps. Remove the pump covers from the distribution plate, install the O-Rings into the O-Ring grooves on the pump tops. Then push the pump into the pump top and screw the cover on. Tighten the pump covers down firmly. Pressure testing is recommended but do not pressure test past 0.5 bar.



Dimensions & Port Layout

① Dimensions are in millimetres

Lian Li O11D Mini Front D5 Reservoir Distribution Plate

