


CASELABS SMA8 DUAL LOOP DISTRIBUTION PLATE



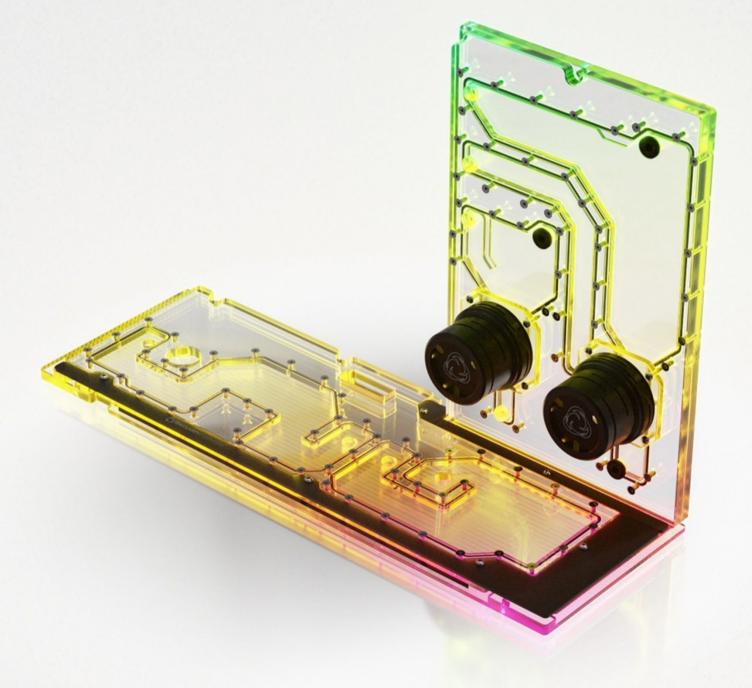

Revision 1.0

Table of Contents

| Introduction | 2 |
|---------------------------------|---|
| Specifications & Included Items | 2 |
| Installation | 2 |
| Dimensions & Port Layout | 3 |

Introduction

Horizontal and Vertical Distribution Plate Set for any version of the Caselabs SMA8. This is a dual loop distribution plate set. The Vertical Distribution Plate mounts to the right of the motherboard and has two integrated reservoirs and D5 pump tops. The Horizontal Distribution Plate mounts below the motherboard on the mid plate and is for the GPU loop and lower radiators. The distribution plates are built from CNC machined clear cast acrylic and use gaskets instead of O-Rings for increased durability. They are hand assembled with stainless steel fasteners. There are two integrated ARGB LED strips with Accent Covers. There are also Back Plates included to cover the rear side of the Distribution Plates, so that you can't see the case panels behind them. Choose from various color options for the Accent Cover and Back Plate to suit your preferences.

| | Dual Loop Distribution Plate Set |
|---------------------------|--|
| Distribution Plate | x1 Horizonal x1 Vertical |
| Integrated LED Strip | ARGB 5V with 50cm cable x2. |
| Fasteners | Stainless Steel. M4 x 25mm x8. M4 Washers x8. M4 Nut x8. |
| Gaskets | Silicone Black. |
| Materials | Cast Acrylic. |
| Manufacturing Process | CNC Router. |
| Assembly | Assembled by hand and pressure tested. |

Specifications & Included Items

Installation

This distribution plate set includes a horizontal distribution plate which installs on to the mid plate of the SMA8 below the motherboard and a vertical distribution plate which mounts to the reservoir mounting area next to the motherboard. Mounting holes need to be added to the case.

Please make sure to use the included O-Rings when installing the pumps. Remove the pump covers from the distribution plate, install the O-Rings into the O-Ring grooves on the pump tops. Then push the pump into the pump top and screw the cover on. Tighten the pump covers down firmly. Pressure testing is recommended but do not pressure test past 0.5 bar.

Dimensions & Port Layout

• Dimensions are in millimetres

