


CORSAIR 1000D DUAL D5 DISTRIBUTION PLATE

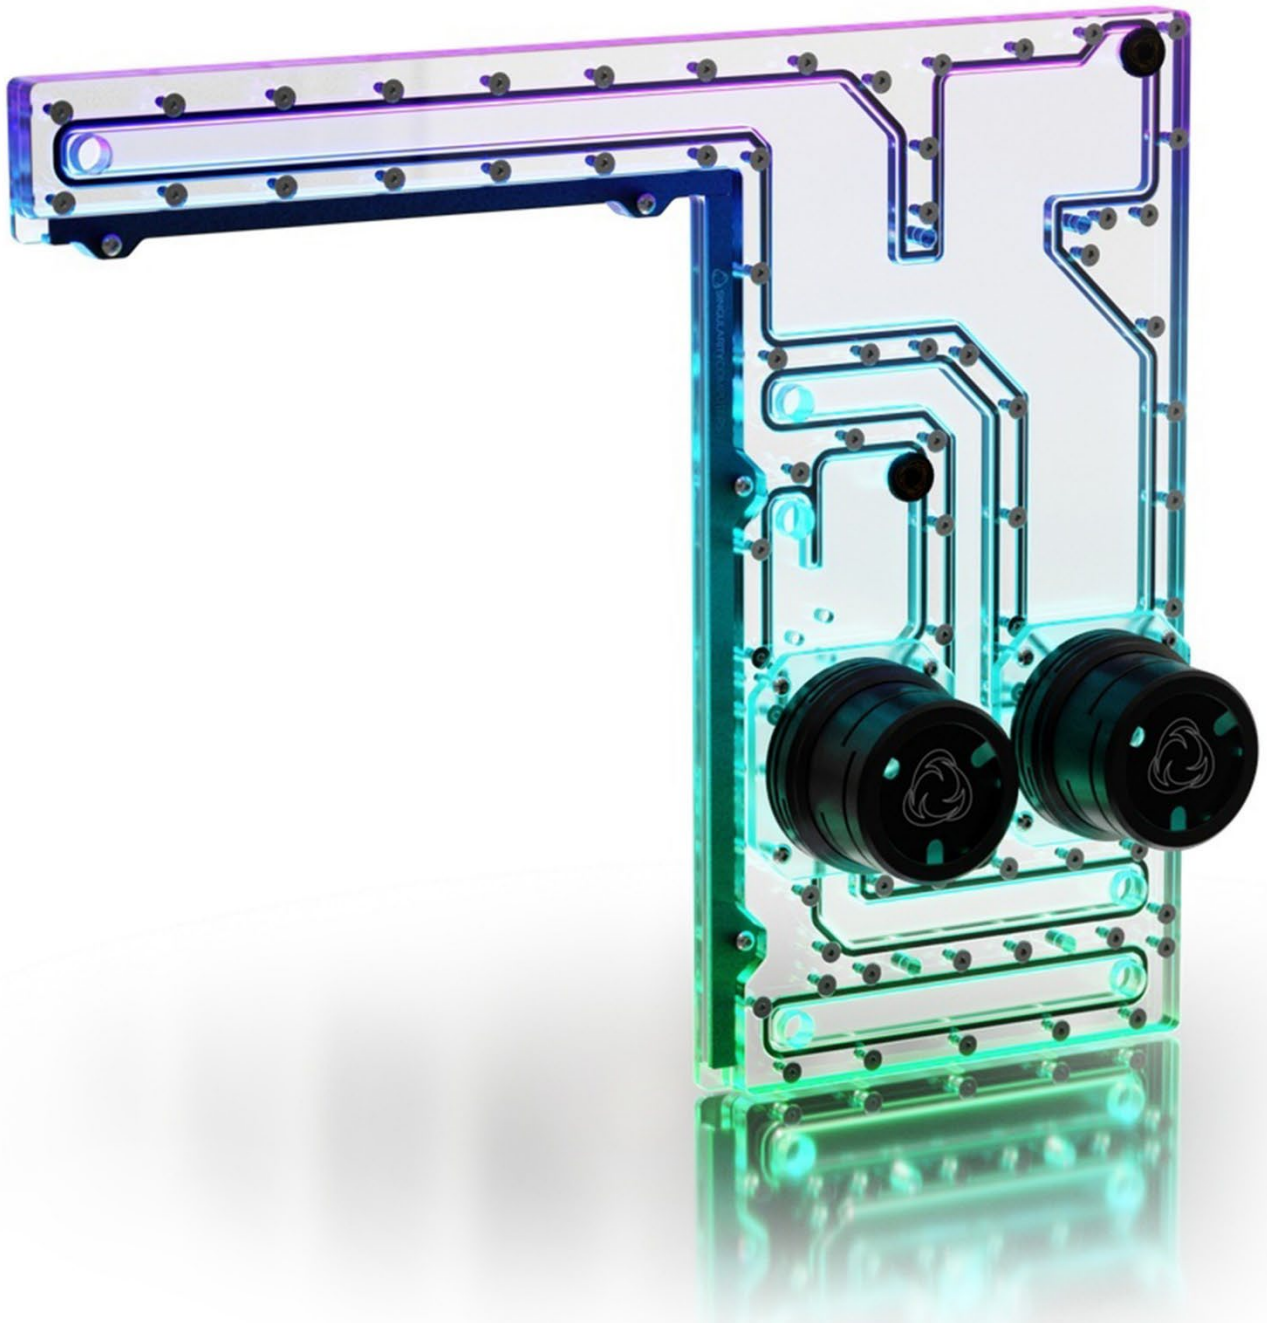

MANUAL

Revision 1.0

Table of Contents

Introduction.....	2
Specifications & Included Items	2
Installation.....	2
Dimensions & Port Layout.....	3

Introduction

Vertical Distribution Plate for the Corsair Obsidian 1000D. It attaches to existing holes on the case so there is no need for modifications. This is a dual loop distribution plate with two integrated reservoirs and D5 pump tops. It fits on the right of the motherboard and the CPU loop return extends across the top of the motherboard. The distribution plate is built from CNC machined clear cast acrylic and uses gaskets instead of O-Rings, for increased durability. It is hand assembled with stainless steel fasteners. There is an integrated ARGB LED strip with an Accent Cover. There is also a Back Plate included to cover the rear side of the Distribution Plate, so that you can't see the case panels behind it. Choose from various color options for the Accent Cover and Back Plate to suit your preferences.

Specifications & Included Items

Corsair 1000D Dual D5 Distribution Plate	
Distribution Plate	x1
Integrated LED Strip	ARGB 5V with 50cm cable.
Fasteners	Stainless Steel. M4 x 25mm x4. M4 Nuts x4.
Gaskets	Silicone Black.
Materials	Cast Acrylic.
Manufacturing Process	CNC Router.
Assembly	Assembled by hand and pressure tested.

Installation

All distribution plates mount to existing mounting holes on the case. Put the distribution plate in position and move it until the mounting holes align with the mounting holes on the case. The included covers can be used between the distribution plates and the case to improve aesthetics. Use the included M4 x12mm fasteners to mount the distribution plates, there are 4 fasteners per distribution plate.

For the Corsair 1000D Dual D5 Distribution Plate make sure to use the included O-Rings when installing the pumps. Remove the pump covers from the distribution plate, install the O-Rings into the O-Ring grooves on the pump tops. Then push the pump into the pump top and screw the cover on. Tighten the pump covers down firmly. Pressure testing is recommended but do not pressure test past 0.5 bar.

Dimensions & Port Layout

❶ Dimensions are in millimetres

