

ASUS HYPERION GR701 D5 RESERVOIR DISTRIBUTION PLATE



MANUAL

Revision 1.0

Table of Contents

Introduction	2
Specifications & Included Items	2
Installation	2
Dimensions & Port Layout	3

Revision 1.0 Page | 1



Introduction

The Asus Hyperion GR701 D5 Reservoir Distribution Plate mounts to the right of the motherboard on the 360mm radiator mount. The ARGB case panel can be mounted behind it. It has an integrated reservoir, D5 pump top, D5 Pump Cover, Fill and Drain Ports. It is built from CNC machined clear cast acrylic and uses gaskets instead of O-Rings for increased durability. It is hand assembled with stainless steel fasteners. It has an integrated ARGB LED strip with an Accent Cover. There is also an optional Back Plate included to cover the rear side of the Rear Distribution Plate, so that you can't see the case panel behind it. Select from the different color options below for the Accent Covers and Back Plates.

Specifications & Included Items

	Asus Hyperion GR701 D5 Reservoir Distribution Plate
Distribution Plate	x1
Integrated D5 Pump Tops	x1
Integrated Reservoir	x1
D5 Pump Cover	CNC Machined Anodized Aluminum.
D5 O-Rings	Silicone Clear.
Integrated LED Strip	ARGB 5V with 50cm cable.
Fasteners	Stainless Steel.
Gaskets	Silicone Black.
Materials	Cast Acrylic.
Manufacturing Process	CNC Router.
Assembly	Assembled by hand and pressure tested.
Packaged Dimensions	L: 420mm x W: 170mm x H: 150mm.
Packaged Weight	1kg.

Installation




First remove the RGB lighting panel which is marked in the diagram below. Underneath it is a 360mm radiator mount. Install the distribution plate onto the 360mm radiator mount with the included M4 10mm x 4. The distribution plate fits onto the front side of the radiator mount and the fasteners are installed from the back.

Please make sure to use the included O-Rings when installing the pumps. Remove the pump covers from the distribution plate, install the O-Rings into the O-Ring grooves on the pump tops. Then push the pump into the pump top and screw the cover on. Tighten the pump covers down firmly. Pressure testing is recommended but do not pressure test past 0.5 bar.

Revision 1.0 Page | 2

Dimensions & Port Layout

• Dimensions are in millimetres

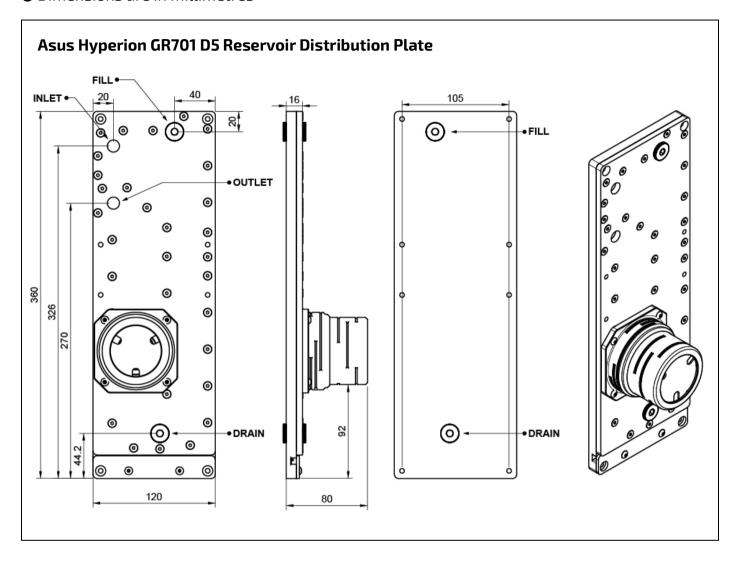

Revision 1.0 **Page** | 3